



# Analog Classic Style Durometer

## ASTM Type 000-S Model 303



ASTM Type 000-S durometers measure the hardness of open and closed cell foam.



- Accuracy  $\pm 2$  Points ( $\pm 3.6$  gf)
- A2LA/NIST Certification Available
- 2 x 2 Inch Presser Foot
- Easy to Read 0 to 100 Point Dial
- Accessory Test Stands Available
- Each Instrument is Individually Calibrated
- Includes Aluminum Test Block and Sturdy Carrying Case



PTC®'s Model 303 ASTM Type 000-S Shore Durometer measures the hardness of viscoelastic polymers. Applications include motorcycle seats, medical pads and wheel chair cushions for pressure ulcer prevention. Equestrian pads, gun recoil pads and cool gel mattresses.

The instrument features a low glare serialized dial with bold, easy to read numbers, and a 2.00" presser foot for increased stability. Each durometer comes complete with a test block and carrying case.

For the best accuracy, we recommend using this durometer with one of our accessory Test Stands.

The Model 470 is compatible with this durometer.

PTC Metrology™ is accredited by A2LA for durometer calibration to ISO/IEC 17025 & ANSI/NCSL Z540-1. NIST traceable certification is available for all durometer types covered by current ASTM D2240, ASTM F1957, ISO 868, ISO 7619 and DIN 5305 standards.

The calibration report will include both "as received" and "as left" data. Complete durometer calibration includes **Indenter Geometry and Extension, Indicator Linearity and Force Curve.**

Other durometer types, custom models and durometers from other manufacturers can also be certified by PTC Metrology™.

### What is the difference between 000 and 000-S?

There are currently two types of 000 durometers that comply with ASTM D2240 now recognized in the industry.

The two distinct 000 units differ in indenter geometry and extension as well as spring force calibration. ASTM D2240 recognizes both variations of the 000 and 000-S.

### SPECIFICATIONS


Range (Type 000-S)	0 to 100 points
Accuracy	$\pm 2$ points ( $\pm 3.6$ gf.)
Test Block (included)	Model 404
Height	4 in. (10.2 cm)
Width	2-1/4 in. (5.7 cm)
Depth	1-3/4 in. (4.4 cm)
Weight	8 oz. (230 g)
Shipping Weight	3 lb. (1.4 kg)

## OPERATING INSTRUCTIONS

The surface of the sample to be tested shall be clean and smooth. The sample should be at least 1/2" (12.7 mm) in thickness unless it is known that identical results are obtained with a thinner specimen. Thinner materials can be stacked to obtain the minimum thickness (DO NOT GLUE). Such results may not agree with those of a solid specimen. The sample should be large enough so that the indenter is at least 1/2" (12 mm) from any edge unless it is known that identical results are obtained when measurements are made closer to the edge. The surface of the specimen shall be flat over a sufficient area to permit the presser foot to contact the specimen over an area having a radius of at least 1/4" from the indenter point. The temperature of the specimen should be 73.4°F ±3.5°F (23°C ±2°C). The specimen should be allowed to rest at this temperature for at least 1 hour prior to testing, as the properties of most materials change with temperature.

Place the specimen on a hard, horizontal surface. Hold the durometer vertically with the point of the indenter at least 1/2" from any edge. Apply the presser foot to the specimen as rapidly as possible, without shock, keeping the foot parallel to the surface of the specimen. Apply just sufficient force to obtain firm contact between the presser foot and the specimen. Hold for 1 or 2 seconds, the maximum reading can be obtained from the ancillary hand. If other than a maximum reading is needed, hold the durometer in place without motion and obtain the reading after the required time interval. Make 5 tests at least 1/4" apart and use the average value.

### PTC® Durometer Styles

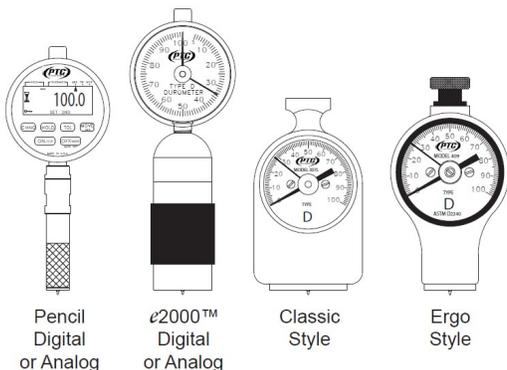

## CALIBRATION CHECK

For a complete calibration check of mainspring, and visual and mechanical check of indenter, the instrument should be returned to PTC Metrology™

(See Guarantee & Calibration Service) or refer to ASTM D2240 Specifications. PTC® recommends the unit be returned at least every 12 months for this check. For a quick field check, follow the guideline below. *Under no circumstance should a test block be used as a standard to calibrate a durometer.*

1. The pointer should read zero when no force is applied to the indenter of the durometer.
2. Hand hold the durometer and insert the indenter into the hole of the calibrated test block. Apply enough force to make firm contact between the top surface of the test block and the base of the durometer. The dial reading should agree with the value stamped on the check block (±1). Several tests should be made and the results averaged.
3. The indenter must protrude 0.098 to 0.100 inches below the base of the durometer.
4. When the indenter is fully displaced, the durometer should read 100 points. Use care as to not damage the tip of the indenter.

Compatible  
Durometer Stand  
Model 470



### LIMITED LIABILITY WARRANTY

PTC® products are covered by a limited liability warranty from defects in material and workmanship for one year from date of purchase. This warranty does not apply if, in the judgement of PTC®, the product fails due to damage from shipment, handling, storage, accident, abuse or misuse, or if it has been used or maintained in a manner not conforming to product's instructions, has been modified in any way, or has a defaced or removed serial number. Repair by anyone other than PTC® or an approved agent voids this warranty. The maximum liability of PTC® is the product purchase price.